2.Exploded Views and Parts List

2-1-1 Total Exploded View (EXPORT BASIC)

HT-DM150N EXPLODED VIEW (EXP)

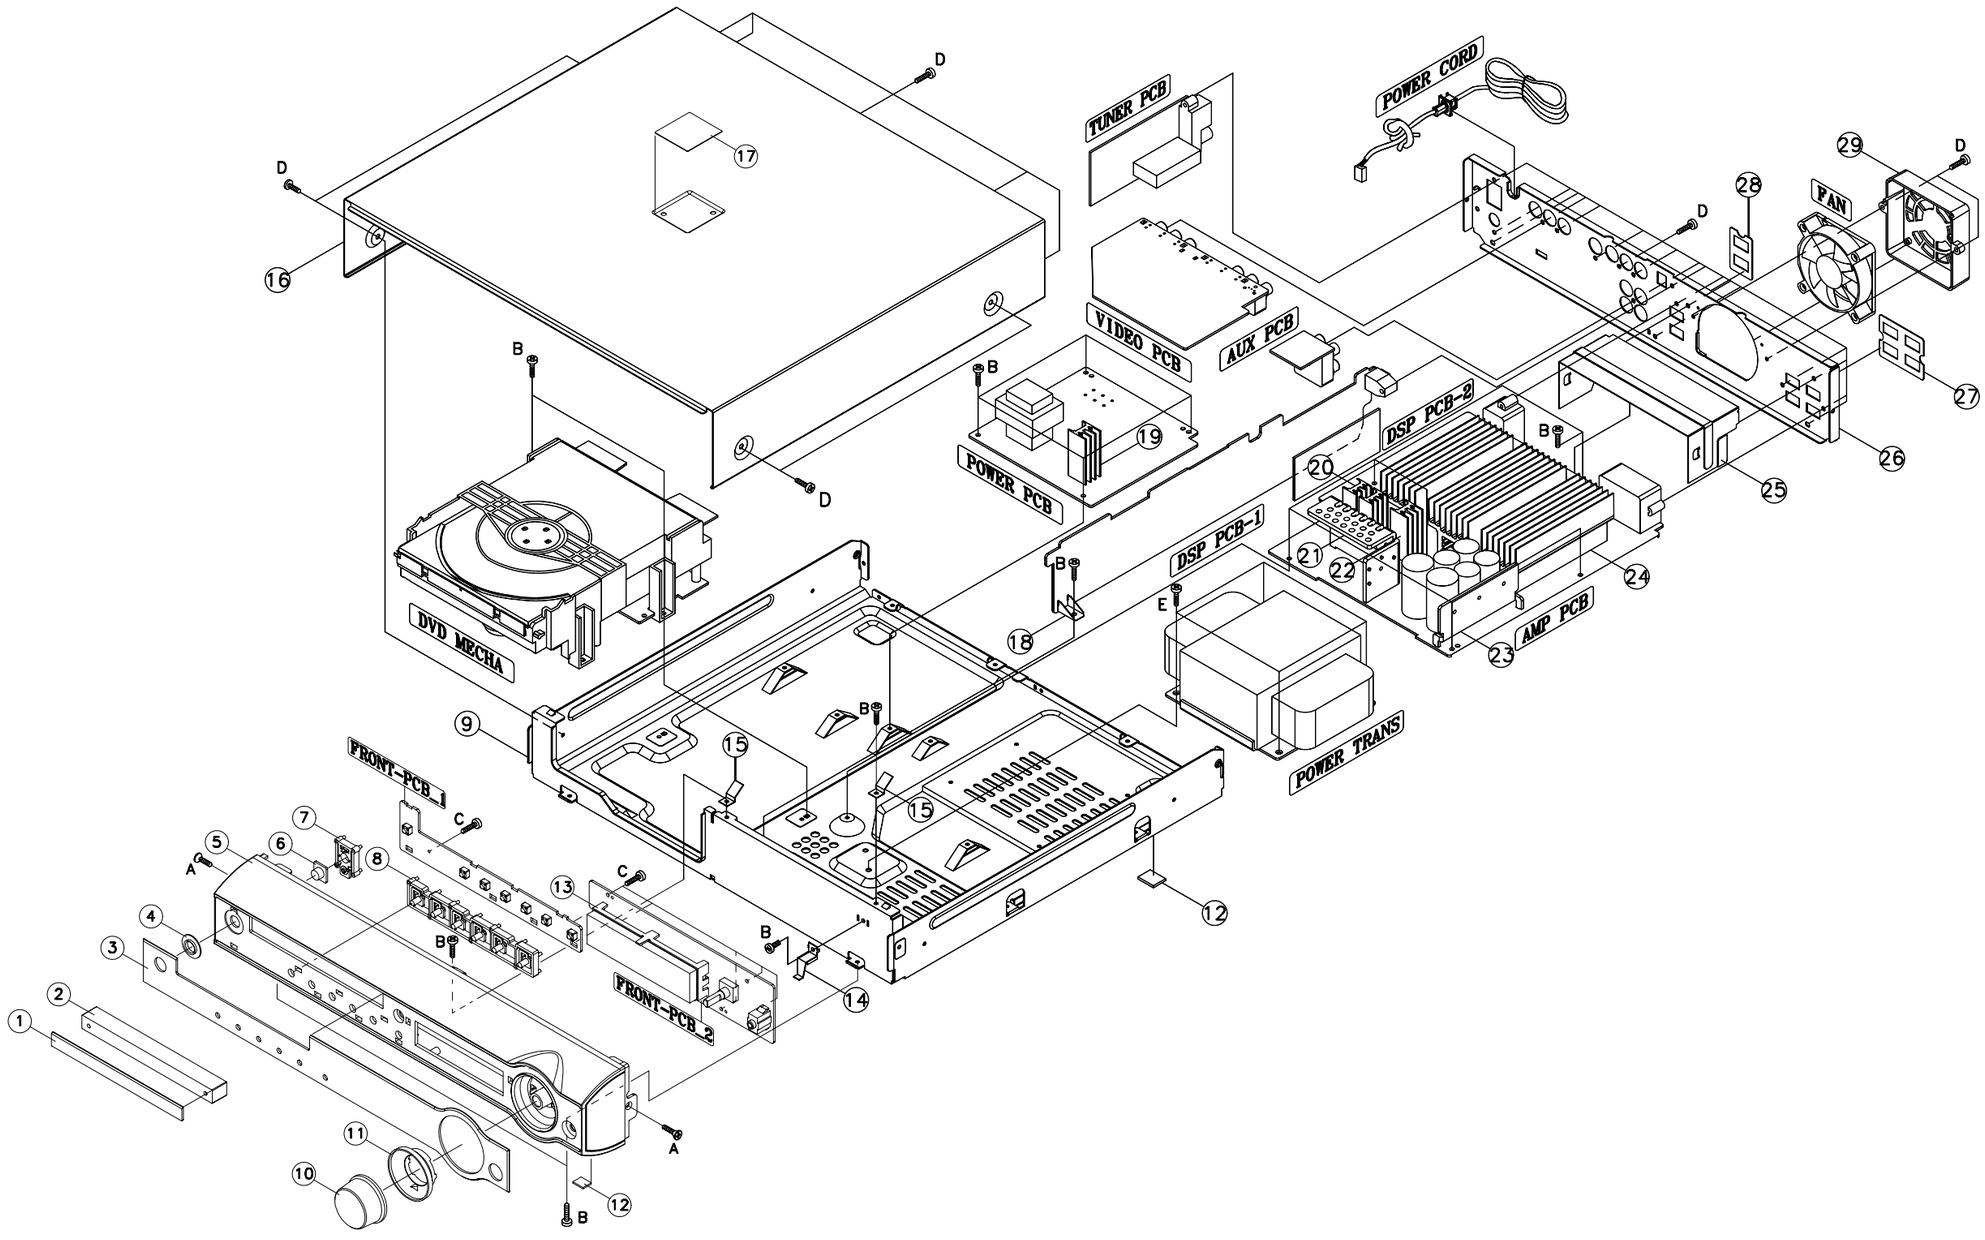

*** Parts List of Total Exploded view (EXPORT BASIC)**

No.	Code No.	Description & Specification	Q'ty	REMARK
1	AH64-02071A	WINDOW-CD DOOR, ACRYL 1.5T	1	
2	AH64-02006B	DOOR-TRAY, ABS GRAY	1	
3	AH64-02072B	WINDOW-VFD, ACRYL 1.5T	1	
4	AH64-02008B	DECO-POWER, ABS NATURAL	1	
5	AH64-02003B	CABINET-FRONT, MIPS GRAY	1	EXP
	AH64-02003C	CABINET-FRONT, MIPS GRAY	1	USA
6	AH67-00182B	LENS-POWER, PMMA MILKY	1	
7	AH64-02010A	KNOB-POWER, ABS GRAY	1	
8	AH64-02009B	KNOB-FUNCTION, ABS CLEAR	1	
9	AH64-01999A	CABINET-BOTTOM, SECC 1.0T	1	
10	AH64-02011B	KNOB-VOLUME, ABS NATURAL	1	
11	AH67-00183A	LENS-VOLUME, PMMA MILKY	1	
12	AH73-00005A	CUSHION-FOOT, EVA2.0T	4	
13	AH61-01131A	HOLDER-VFD, ABS BLK	1	
14	AH63-00388D	SHIELD-PCB, PBS 0.3T	1	
15	AH63-00388C	SHIELD-TOP, PBS 0.3R	2	
16	AH64-02001C	CABINET-TOP	1	
17	AH64-01538B	BADGE-DVD, PE 0.25T	1	
18	AH61-01140A	BRACKET-PCB, SPTE 0.5T	1	
19	AH62-30062A	HEAT-SINK.TR, AL EXTR	1	
20	AH62-00062C	HEAT-SINK.TR. AL EXTR	2	
21	AH62-00083A	HEAT-SINK.DVDP, AL EXTR	1	
22	AH62-30061A	HEAT-SINK.TR, AL EXTR	1	
23	AH62-00052D	HEAT-SINK.DIO, AL EXTR	1	
24	AH62-00082A	HEAT-SINK.F, AL EXTR	3	
25	AH61-01356A	BRACKET-DUCT, SECC 0.6T	1	
26	AH64-02403E	CABINET-REAR, SECC 0.8T	1	EXP,USA
27	AH63-00569A	SHEET-SPK R, PVC 0.3T	1	
28	AH63-00569B	SHEET-SPK FCW, PVC 0.3T	1	
29	AH63-00303B	COVER-FAN, MIPS GRAY	1	

No.	Code No.	Description & Specification	Q'ty	REMARK
A	6002-000126	SCREW-TAPTITE, FH, 3*10, BLK	2	
B	6002-000398	SCREW-TAPTITE, BH, 3*6, YEL	17	
C	6003-000109	SCREW-TAPTITE, RH, 2.6*8, YEL	6	
D	6003-001464	SCREW-TAPTITE, BH, 3*10, SIL	28	
E	6003-001463	SCREW-TAPTITE, TH, 4*6, YEL	4	

HT-DM150N/155/160 EXPLODED VIEW (EUR)

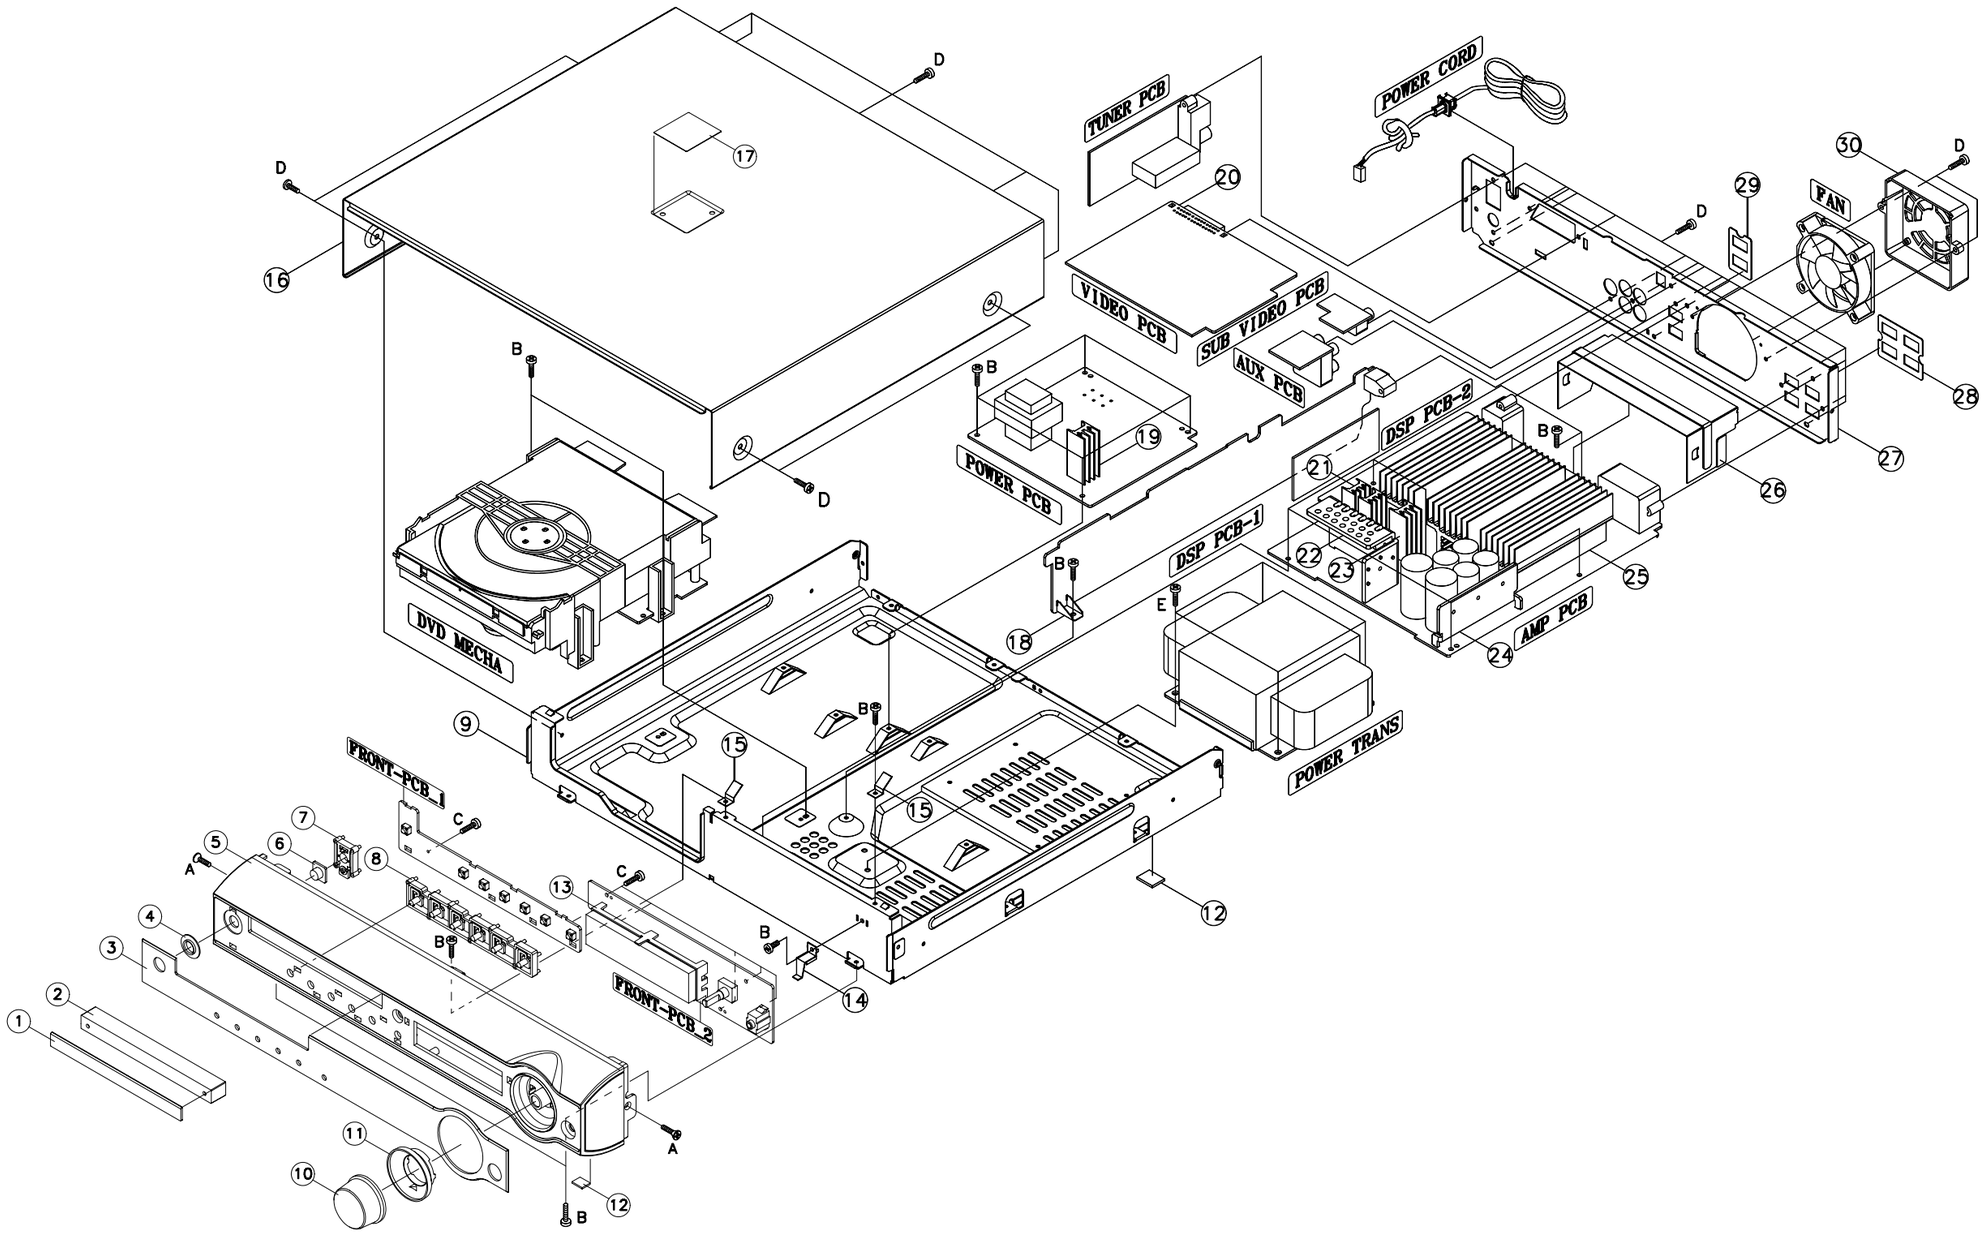

*** Parts List of Total Exploded view (EUROPE)**

No.	Code No.	Description & Specification	Q'ty	REMARK
1	AH64-02071A	WINDOW-CD DOOR, ACRYL 1.5T	1	
2	AH64-02006B	DOOR-TRAY, ABS GRAY	1	
3	AH64-02072B	WINDOW-VFD, ACRYL 1.5T	1	
4	AH64-02008B	DECO-POWER, ABS NATURAL	1	
5	AH64-02003E	CABINET-FRONT, MIPS GRAY	1	HT-DM150N
	AH64-02003K	CABINET-FRONT, MIPS GRAY	1	HT-DM160
	AH64-02003M	CABINET-FRONT, MIPS GRAY	1	HT-DM155
6	AH67-00182B	LENS-POWER, PMMA MILKY	1	
7	AH64-02010A	KNOB-POWER, ABS GRAY	1	
8	AH64-02009B	KNOB-FUNCTION, ABS CLEAR	1	
9	AH64-01999A	CABINET-BOTTOM, SECC 1.0T	1	
10	AH64-02011B	KNOB-VOLUME, ABS NATURAL	1	
11	AH67-00183A	LENS-VOLUME, PMMA MILKY	1	
12	AH73-00005A	CUSHION-FOOT, EVA2.0T	4	
13	AH61-01131A	HOLDER-VFD, ABS BLK	1	
14	AH63-00388D	SHIELD-PCB, PBS 0.3T	1	
15	AH63-00388C	SHIELD-TOP, PBS 0.3R	2	
16	AH64-02001C	CABINET-TOP	1	
17	AH64-01538B	BADGE-DVD, PE 0.25T	1	
18	AH61-01140A	BRACKET-PCB, SPTE 0.5T	1	
19	AH62-30062A	HEAT-SINK.TR, AL EXTR	1	
20	AH63-00386A	SHIELD-SCART, SPTE 0.3T	1	ONLY ELS
21	AH62-00062C	HEAT-SINK.TR. AL EXTR	2	
22	AH62-00083A	HEAT-SINK.DVDP, AL EXTR	1	
23	AH62-30061A	HEAT-SINK.TR, AL EXTR	1	
24	AH62-00052D	HEAT-SINK.DIO, AL EXTR	1	
25	AH62-00082A	HEAT-SINK.F, AL EXTR	3	
26	AH61-01356A	BRACKET-DUCT, SECC 0.6T	1	
27	AH64-02403D	CABINET-REAR, SECC 0.8T	1	EUR
28	AH63-00569A	SHEET-SPK R, PVC 0.3T	1	
29	AH63-00569B	SHEET-SPK FCW, PVC 0.3T	1	
30	AH63-00303B	COVER-FAN, MIPS GRAY	1	
A	6002-000126	SCREW-TAPTITE, FH, 3*10, BLK	2	
B	6002-000398	SCREW-TAPTITE, BH, 3*6, YEL	17	
C	6003-000109	SCREW-TAPTITE, RH, 2.6*8, YEL	6	
D	6003-001464	SCREW-TAPTITE, BH, 3*10, SIL	26	
E	6003-001463	SCREW-TAPTITE, TH, 4*6, YEL	4	

2-2 MECHA Exploded View and Parts list

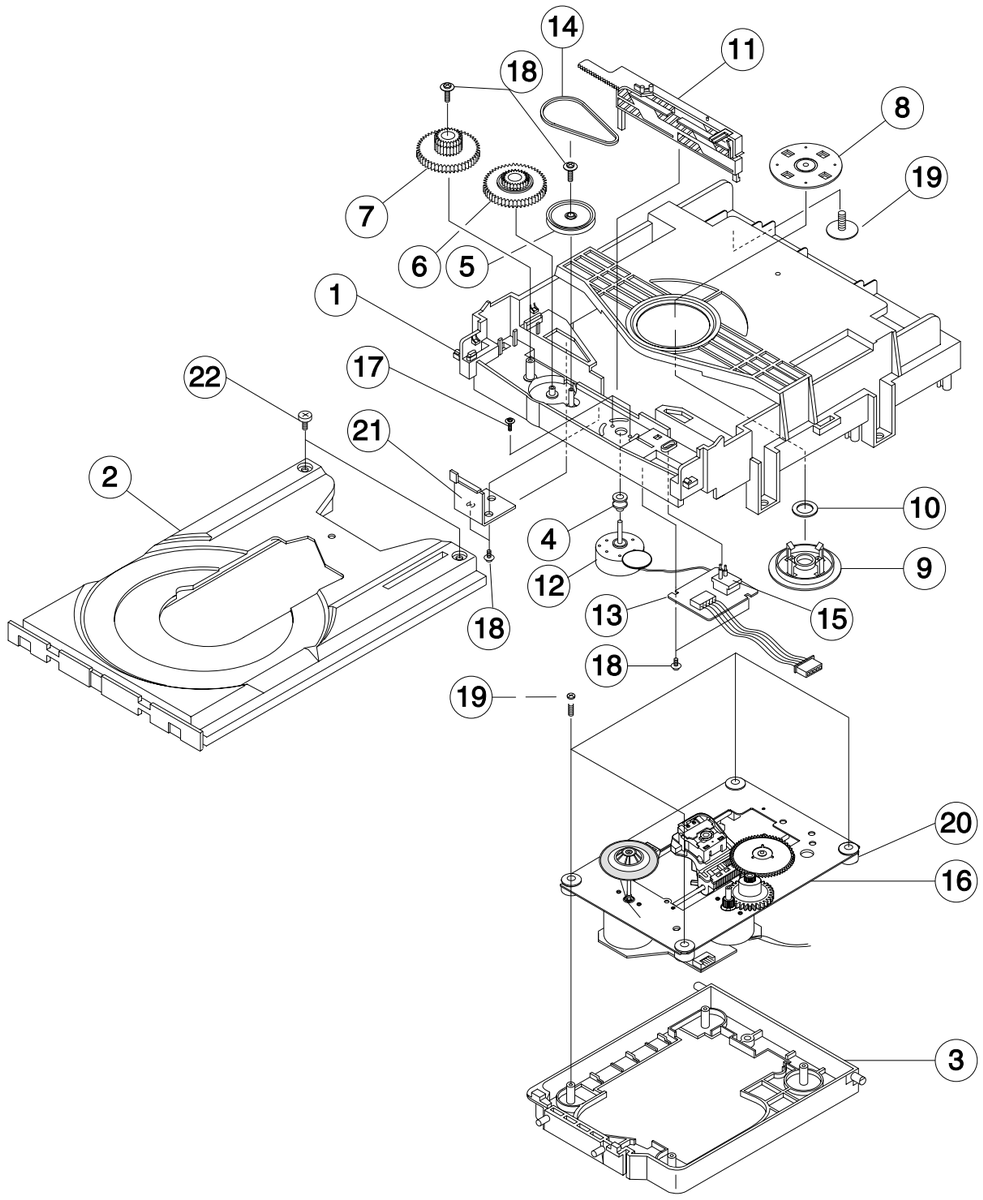

No.	Code No.	Description ;	Specification	Q'TY
	AH97-01117A	**DVD MECHA**	**CMS-D100**	
1	AH61-00746A	BASE-MAIN	ABS BLK	1
2	AH63-00294A	TRAY-DISC	ABS D/GRAY	1
3	AH66-00159C	LEVER-LIFT	ABS BLK	1
4	AH66-00160A	PULLEY-MOTOR	POM WHT	1
5	AH66-00161A	GEAR-PULLEY	TPE WHT	1
6	AH66-00162A	GEAR-MIDDLE	TPE WHT	1
7	AH66-00163A	GEAR-TRAY	POM WHT	1
8	AH66-00164A	CLAMPER-UPPER	POM WHT	1
9	AH66-00165A	CLAMPER-LOWER	POM WHT	1
10	AH61-00747A	BRACKET-CHUCK	SECC t1.0	1
11	AH66-00166A	SLIDE-CAM	POM WHT	1
12	AH31-00030A	MOTOR-DC	RF-300CA-11440	1
13	AH41-00352A	PCB-SWITCH	26.5*21.6	1
14	AH66-00167A	BELT-PULLEY	CR 1.5	1
15	3409-001119	SWITCH-DETECTOR	JDS2200	1
16	AH59-00130A	DVD DECK	CMS-S21MG6	1
17	6001-001257	SCREW-MACHINE	1.7*3(W4.5)	2
18	AJ60-10001A	SCREW-TAP	2*5(W7)	6
19	6003-001210	SCREW-TAP	2.6*6(W12)	5
20	AH73-00025B	RUBBER-CD	BUTYL 15	4
21	AH61-00958A	BRACKET-GUIDE	SECC 1.0t	1
22	6003-000283	SCREW-TAP	3*8	2

**** Caution:** Actually, the whole MECHA do not include DECK ASSY. DECK ASSY should be requested separately at service repair.*

2-3 SPEAKER Exploded View and Parts list

2-3-1. HT-DM150N

* CAUTION : It is used the bonding, connect NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to damage the SPEAKER.

*** CENTER SPEAKER**

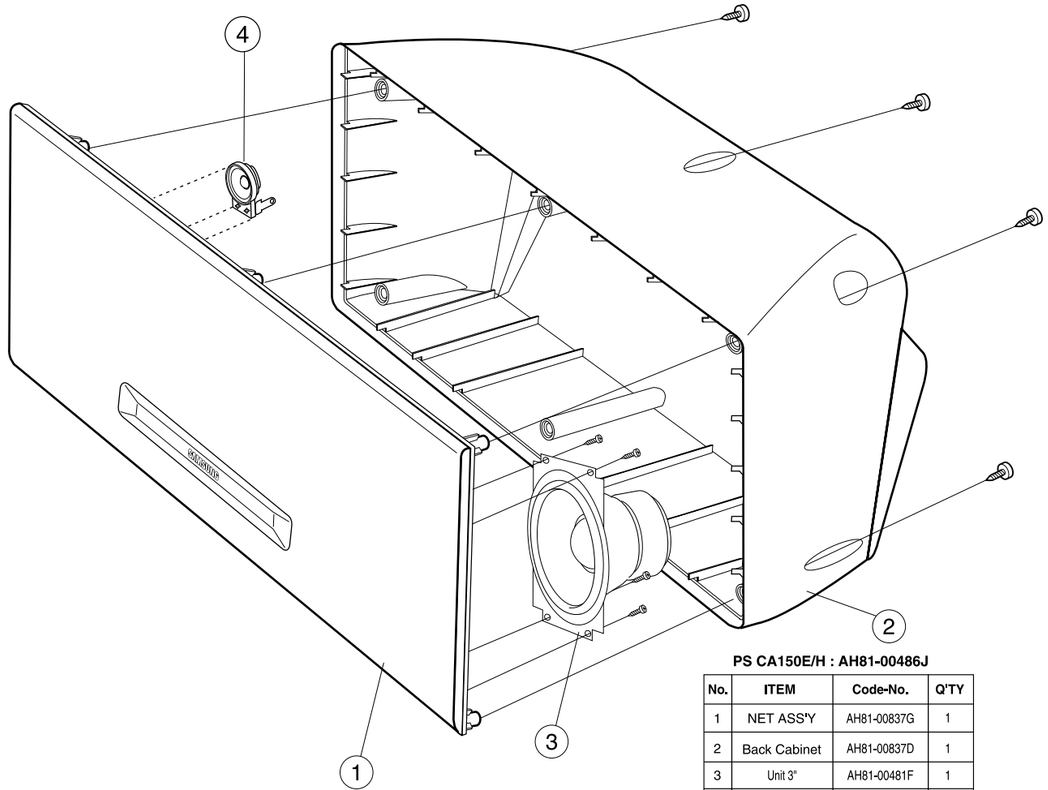

PS CA150E/H : AH81-00486J

No.	ITEM	Code-No.	Q'TY
1	NET ASS'Y	AH81-00837G	1
2	Back Cabinet	AH81-00837D	1
3	Unit 3"	AH81-00481F	1
4	Unit 11mm	AH81-00837L	1

*** Satellite SPEAKER**

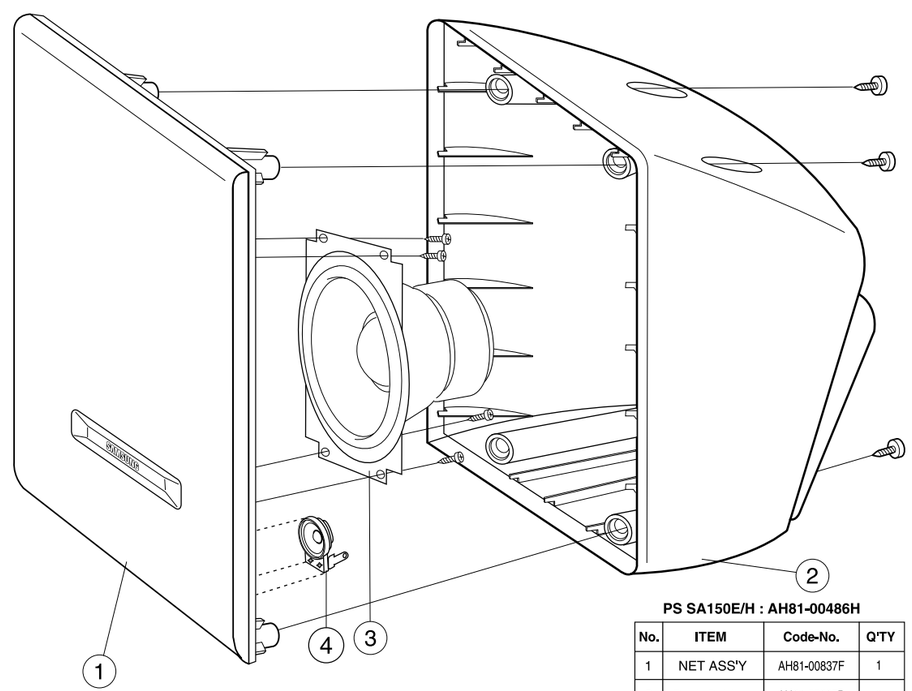

PS SA150E/H : AH81-00486H

No.	ITEM	Code-No.	Q'TY
1	NET ASS'Y	AH81-00837F	1
2	Back Cabinet	AH81-00837B	1
3	Unit 3"	AH81-00481F	1
4	Unit 11mm	AH81-00837L	1

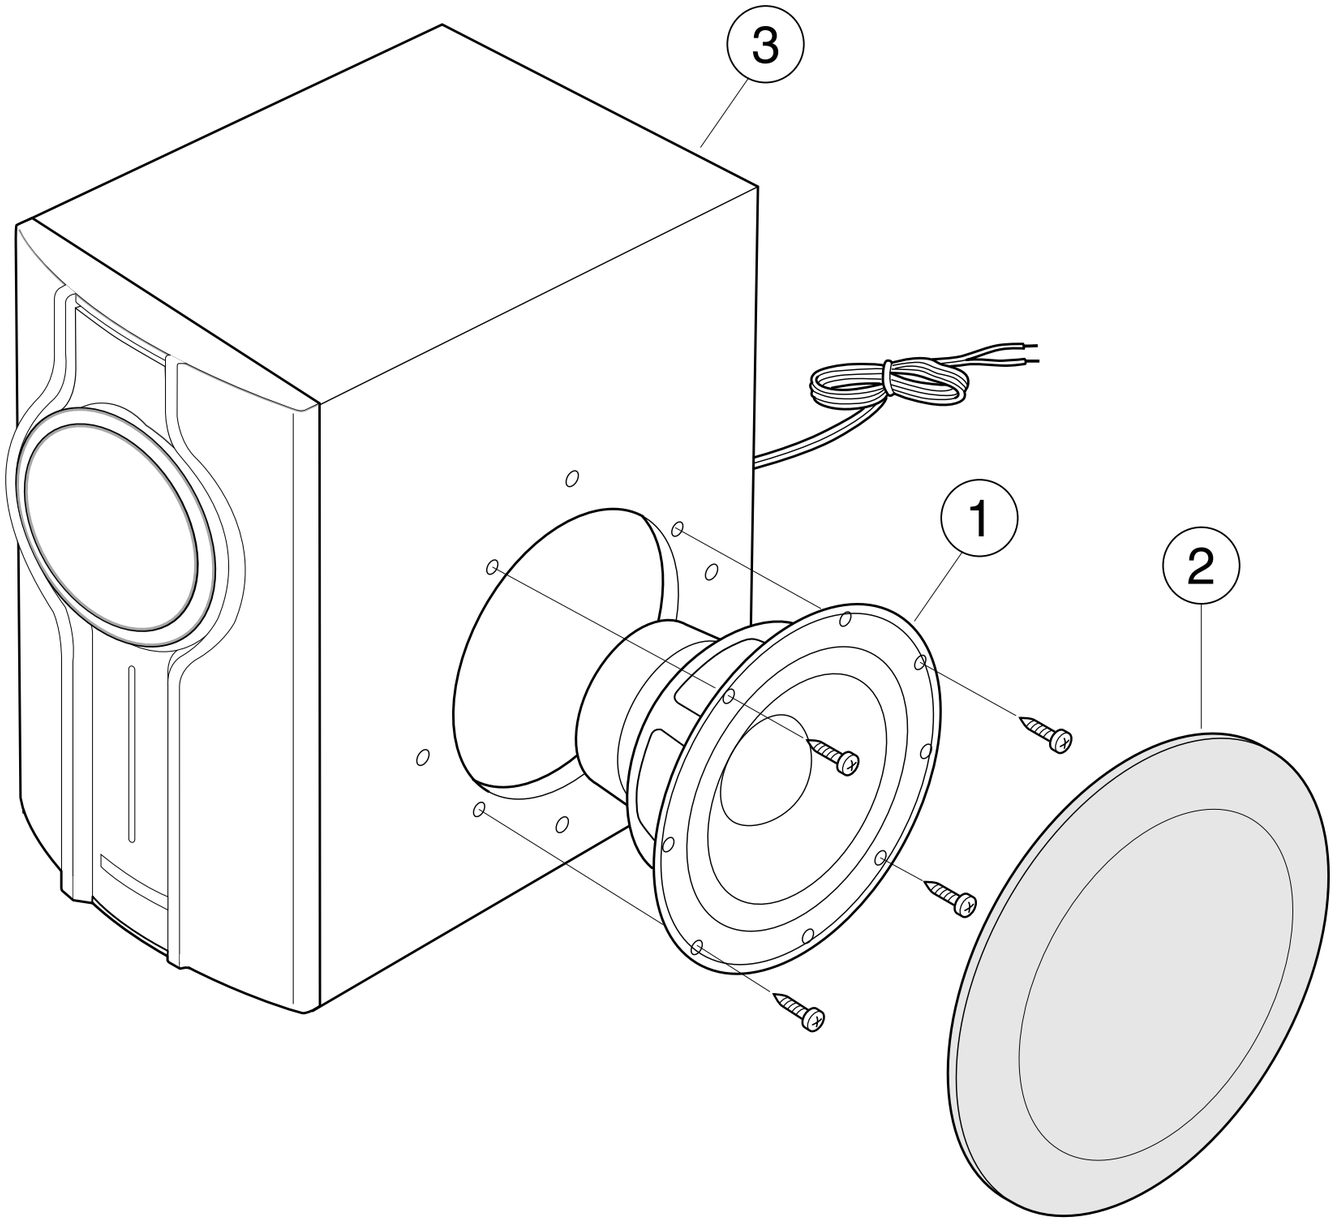

PS WA150E : AH81-00486K

No.	Description	Specification	Code No.	Q'TY
1	UNIT WOOFER	F80C-D0803-4	AH81-00830D	1
2	NET ASS'Y	NET+JERSEY	AH81-00830B	1
3	CABINET ASS'Y	Panel+Cabinet	AH81-00830C	1
	HT-DM150			
	CABINET ASS'Y	Panel+Cabinet	AH81-00830G	1
	HT-DM550			

* Satellite Speaker

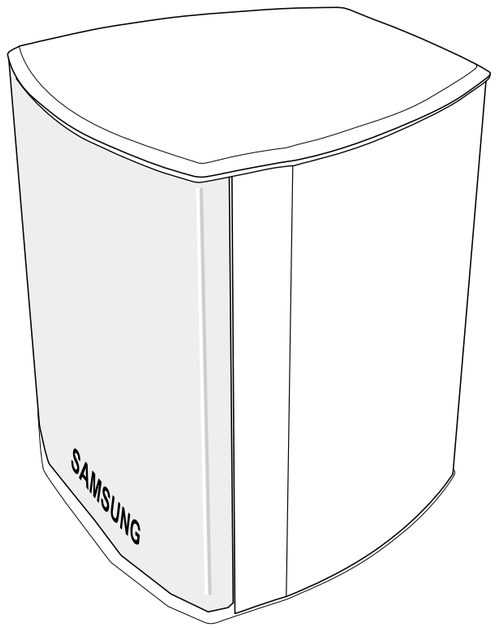

PSSA155E : AH81-01357B

* SUBWOOFER

* CAUTION : It is used the bonding, connect NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to damage the SPEAKER.

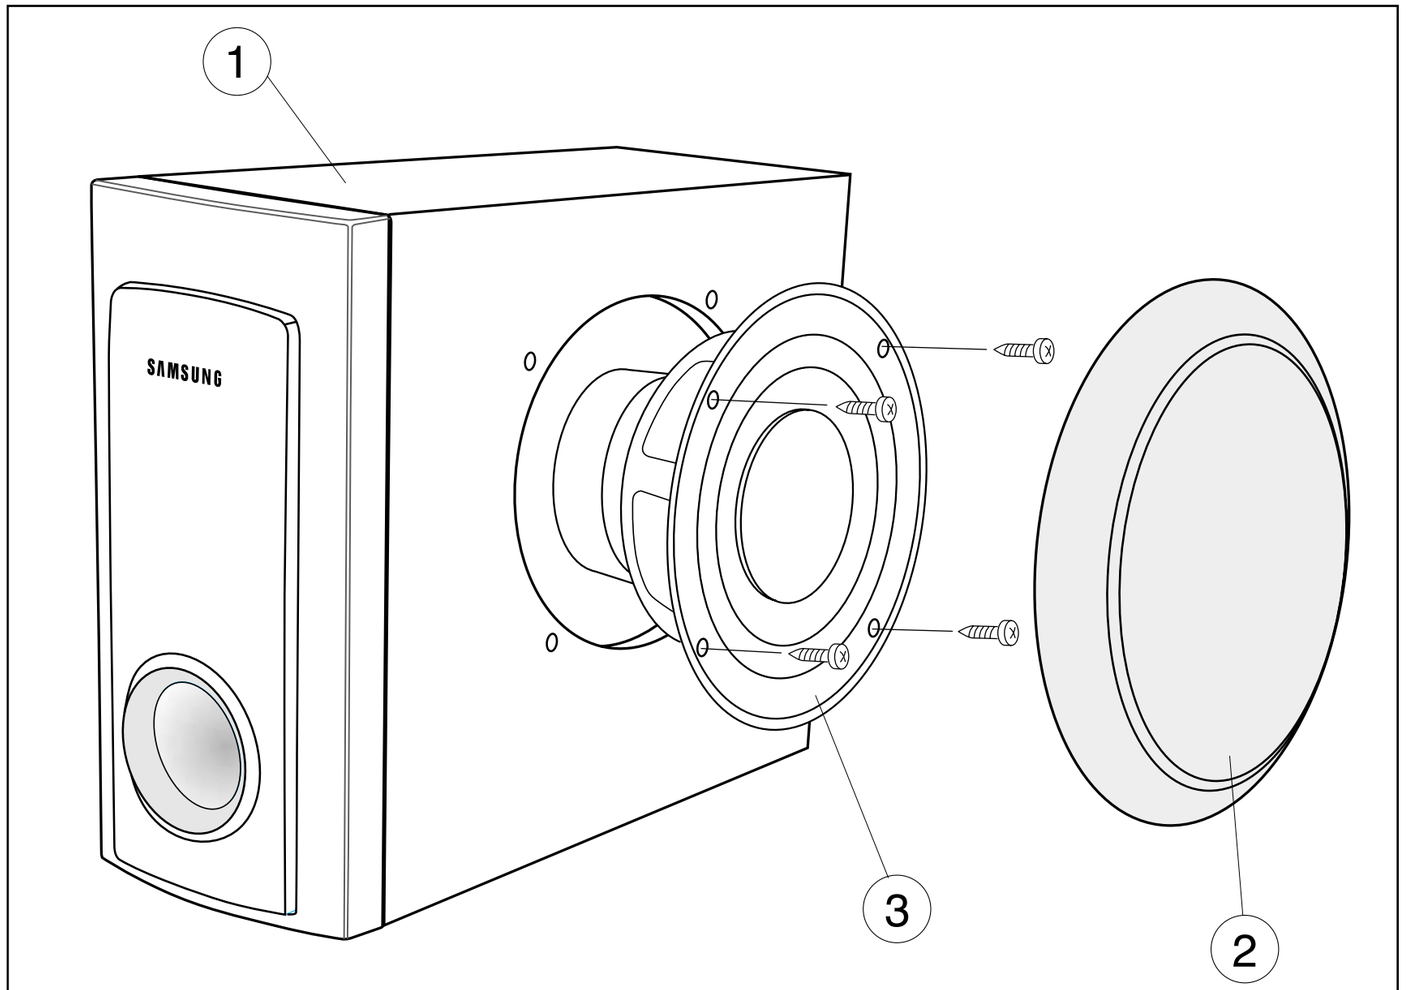

PSWA155E : AH81-01237C

No.	ITEM	Code No.	Q'TY
1	CABINET ASS'Y	AH81-01237D	1
2	NET ASS'Y	AH81-01237E	1
3	SPEAKER UNIT	AH81-01237F	1

* Center Speaker

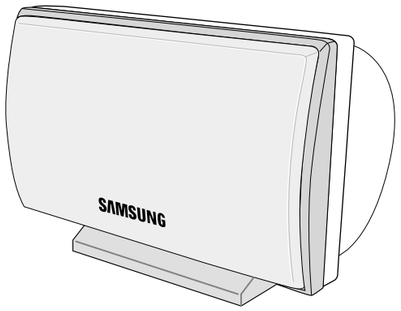

PS CA160E : AH81-01075A

* Satellite Speaker

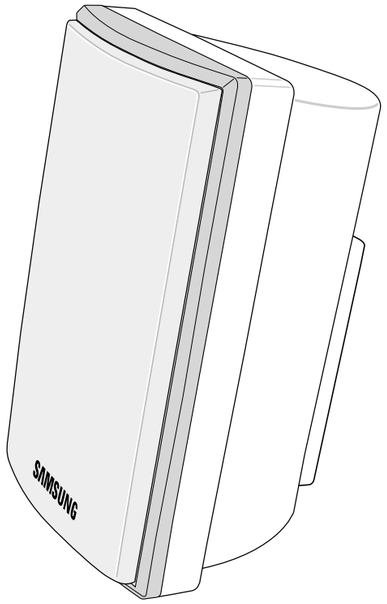

PS SA160E : AH81-01074A

* CAUTION : It is used the bonding, connect NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to damage the SPEAKER.

* SUBWOOFER

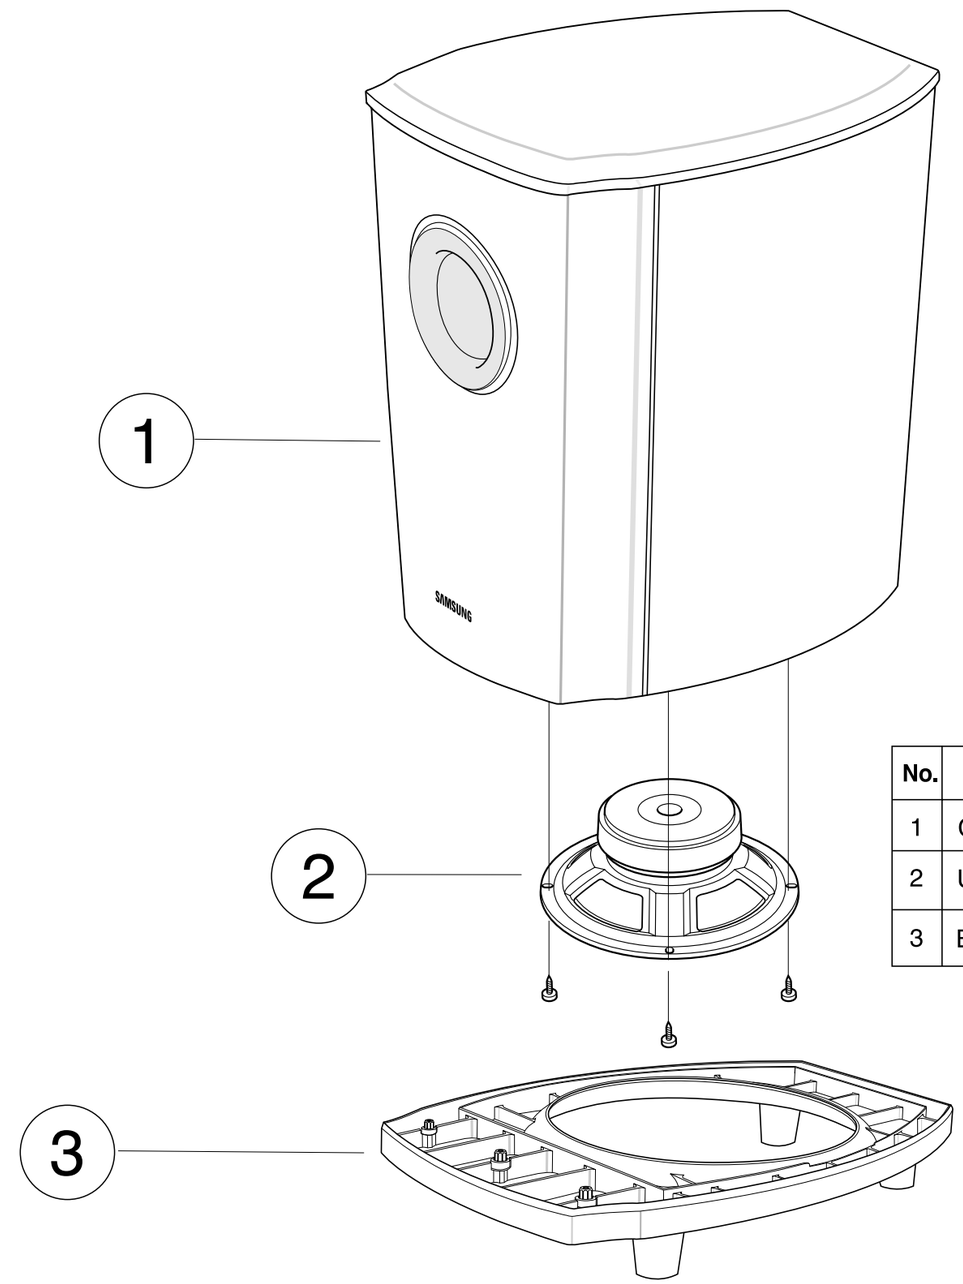

PS WA160E : AH81-01071C

No.	ITEM	Code No.	Q'TY
1	CABINET ASS'Y	AH81-01071N	1
2	UNIT WOOFER	AH81-01071M	1
3	BOTTOM BRACE	AH81-01071F	1